

# ANC-120e USB to DH+ Adapter



## ANC-120e USB driver installation for windows 8 / Windows 10


---

*This document provides information to install the ANC-120e driver for Windows 10 and Windows 8*


There shall be 2 files in the driver package that you have received from Automation Networks & Solutions LLC.:

- “ANC120e\_RNDIS\_WIN8-10.inf” – Driver description file
- “anc120e.cat” – signed security *catalog* file


1. Open “Device Manager” window
2. If Windows incorrectly assigned a USB-serial driver to ANC-120e device, we need to replace the driver.

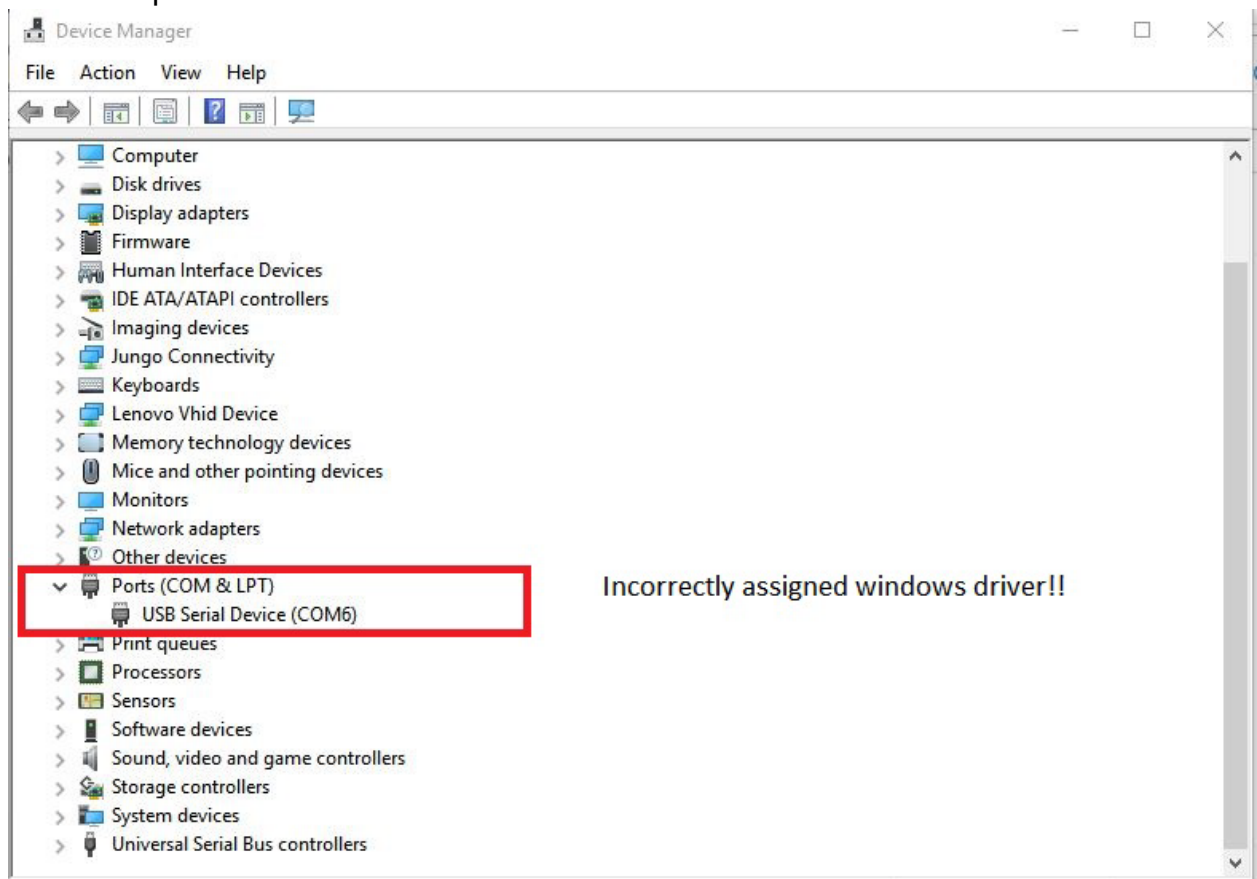


3. Right click on “*USB Serial Device (COMX)*”, where *X* can be any number and is dynamically assigned by Windows OS
4. Click on “*Update Driver Software..*”
5. Click on “*Browse my computer for driver software*”

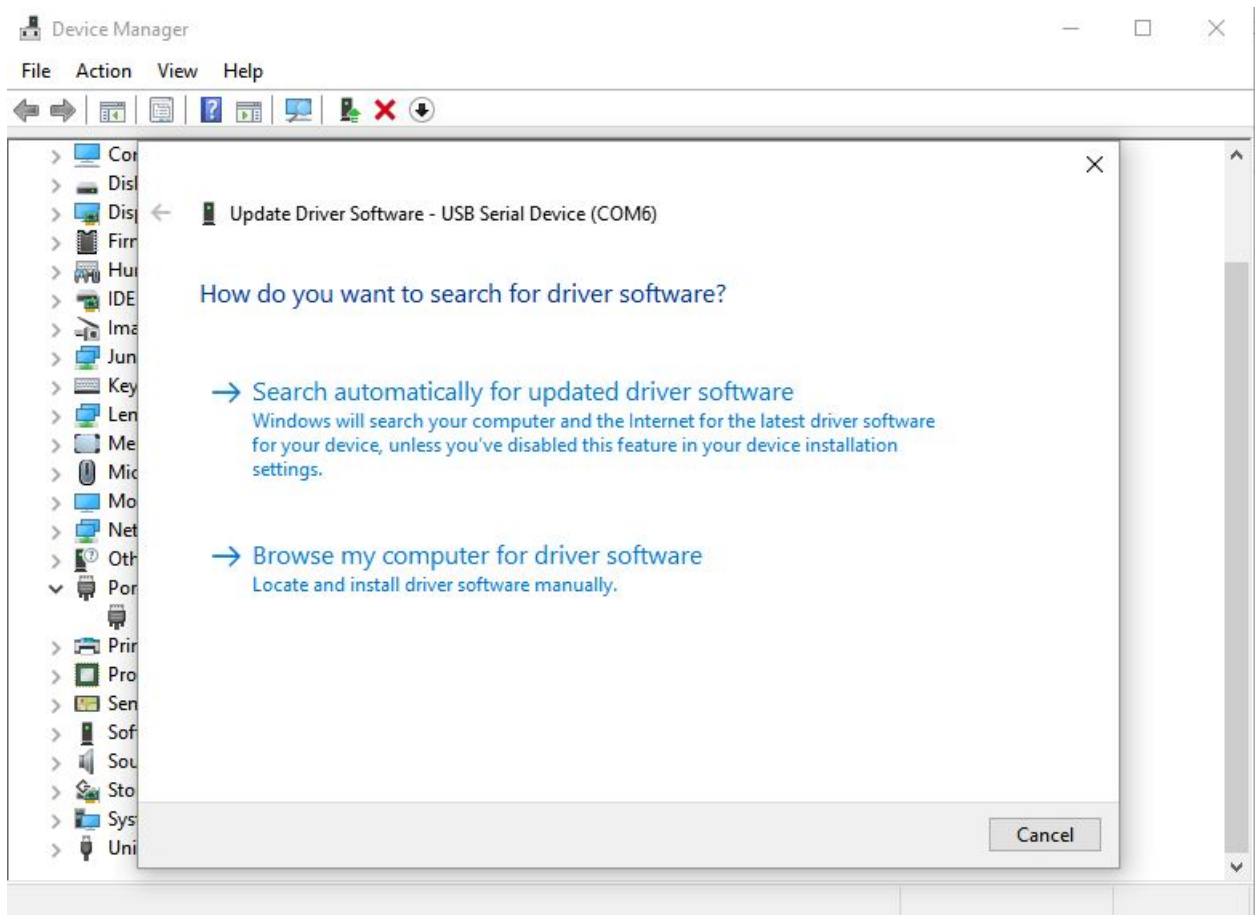

6. Click on “*Let me pick from a list of device drivers on my computer*”
7. Click on “*Have Disk*” button
8. Click “*Browse*” and navigate to the folder on your computer where the ANC-120e driver package is located

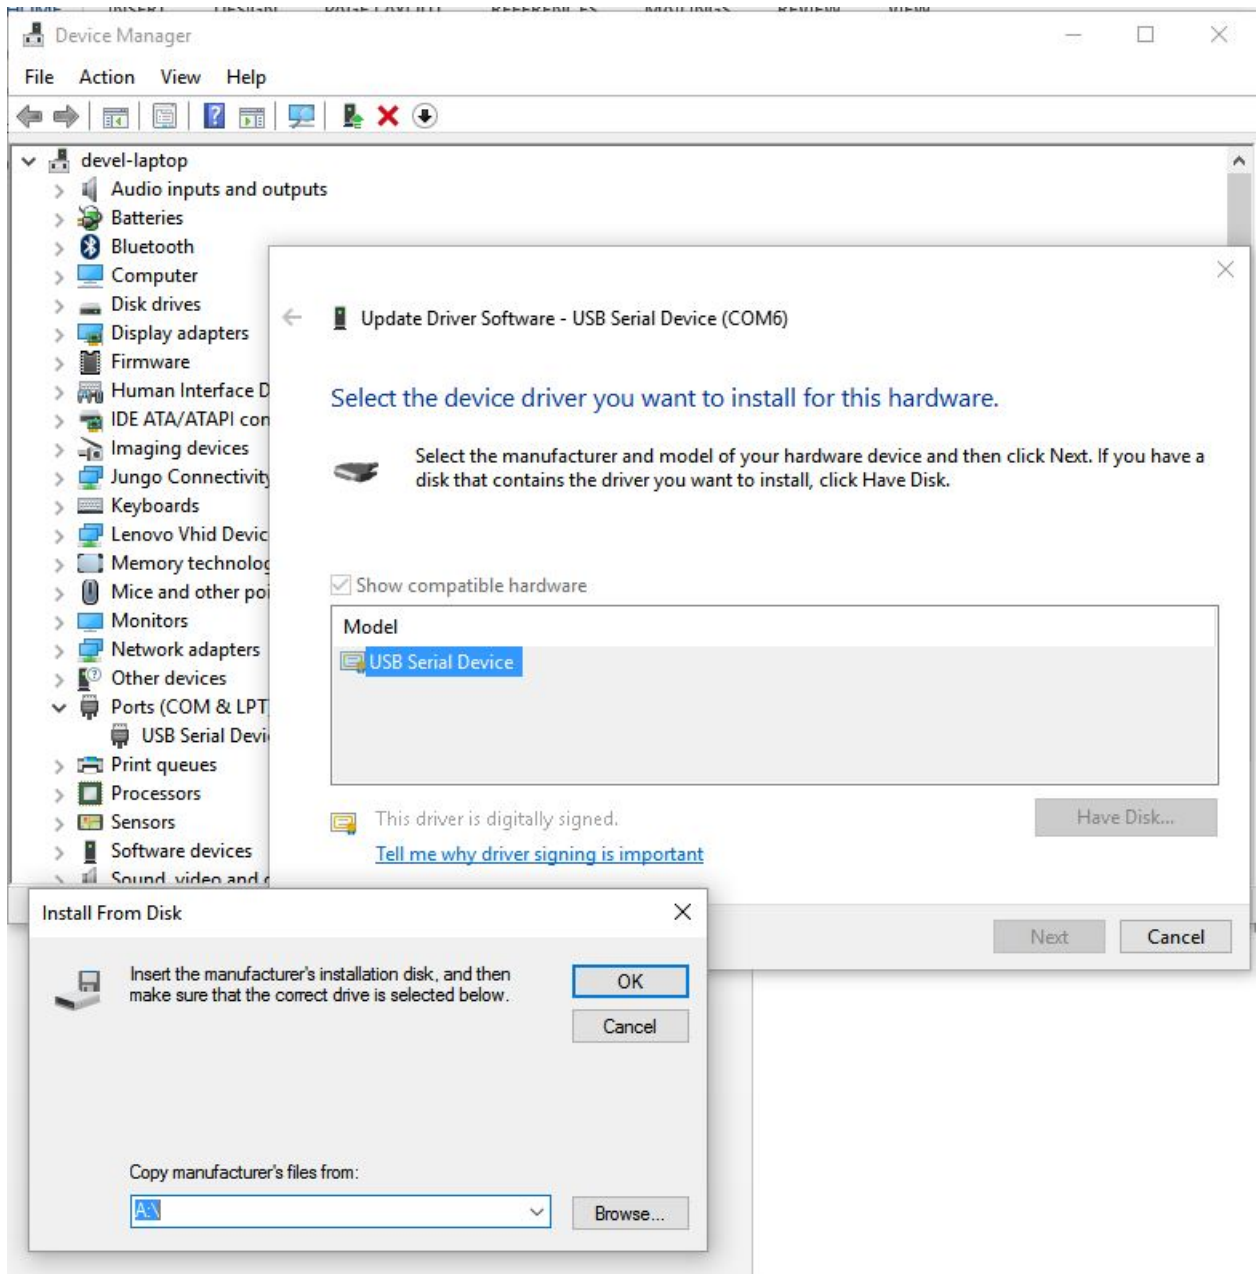


9. Select “ANC120e\_RNDIS\_WIN8-10.inf” file and press “Open” and then “OK”

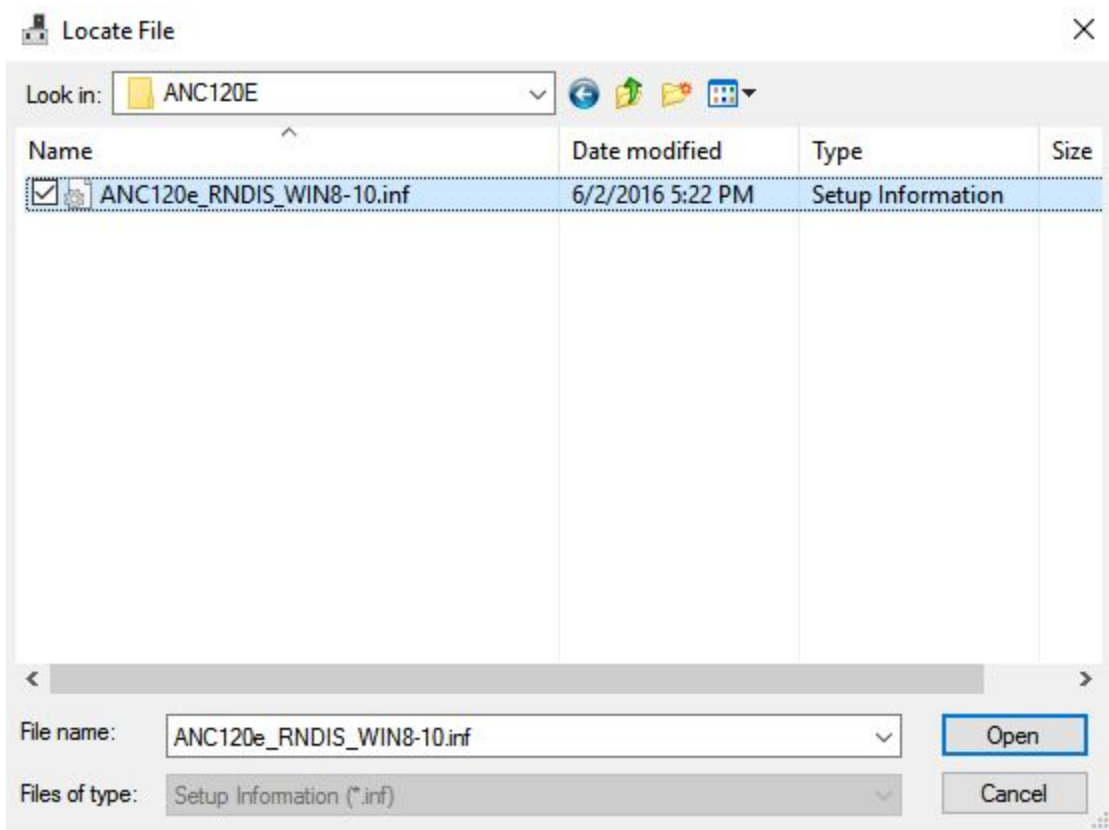


10. Now the correct ANC-120e driver will be displayed


11. Click "Next" button

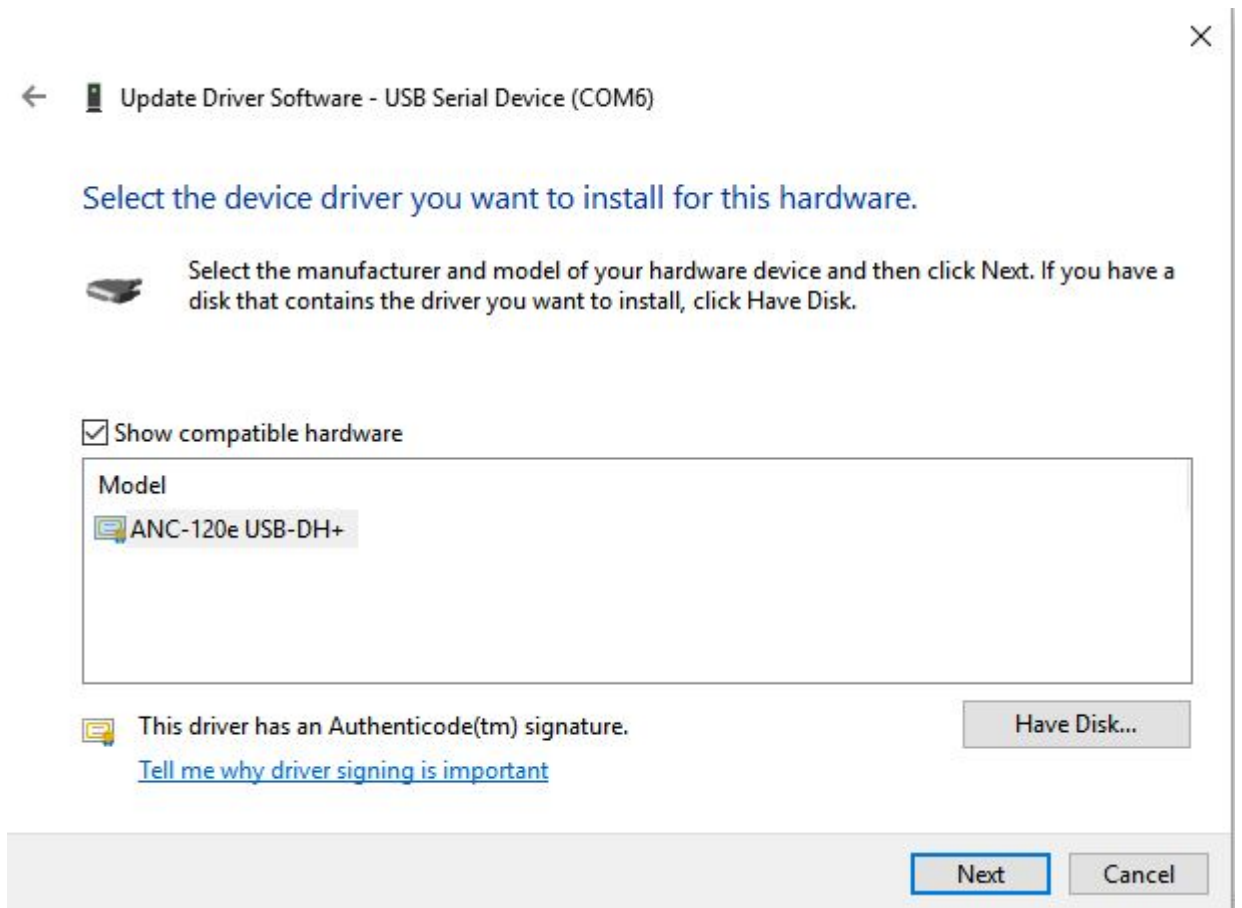

12. The driver will start installing and a confirmation window will appear indicating that the driver was installed successfully
13. Click "Close"

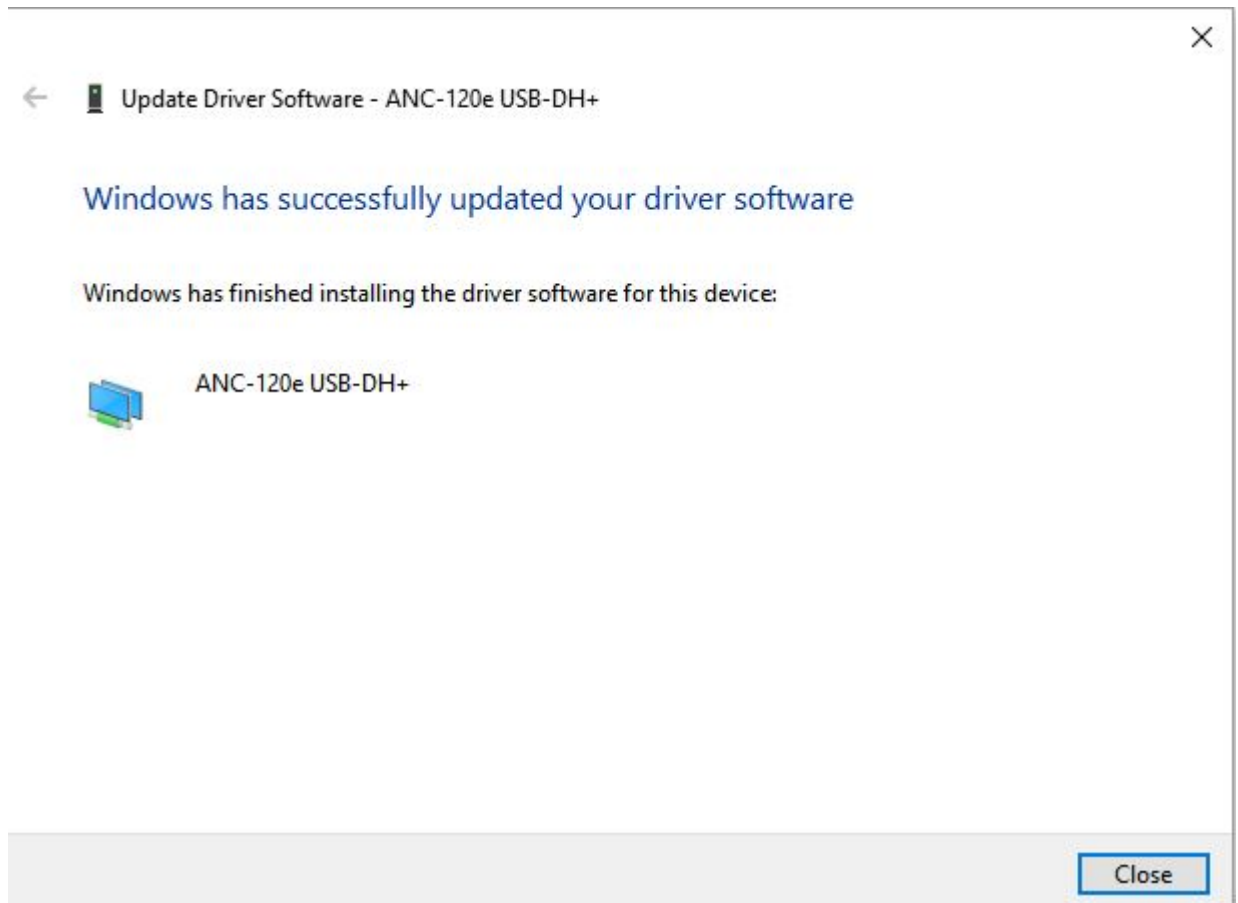

14. Now ANC-120e device will be visible in the “*Device Manager*” window under “*Network Devices*” category

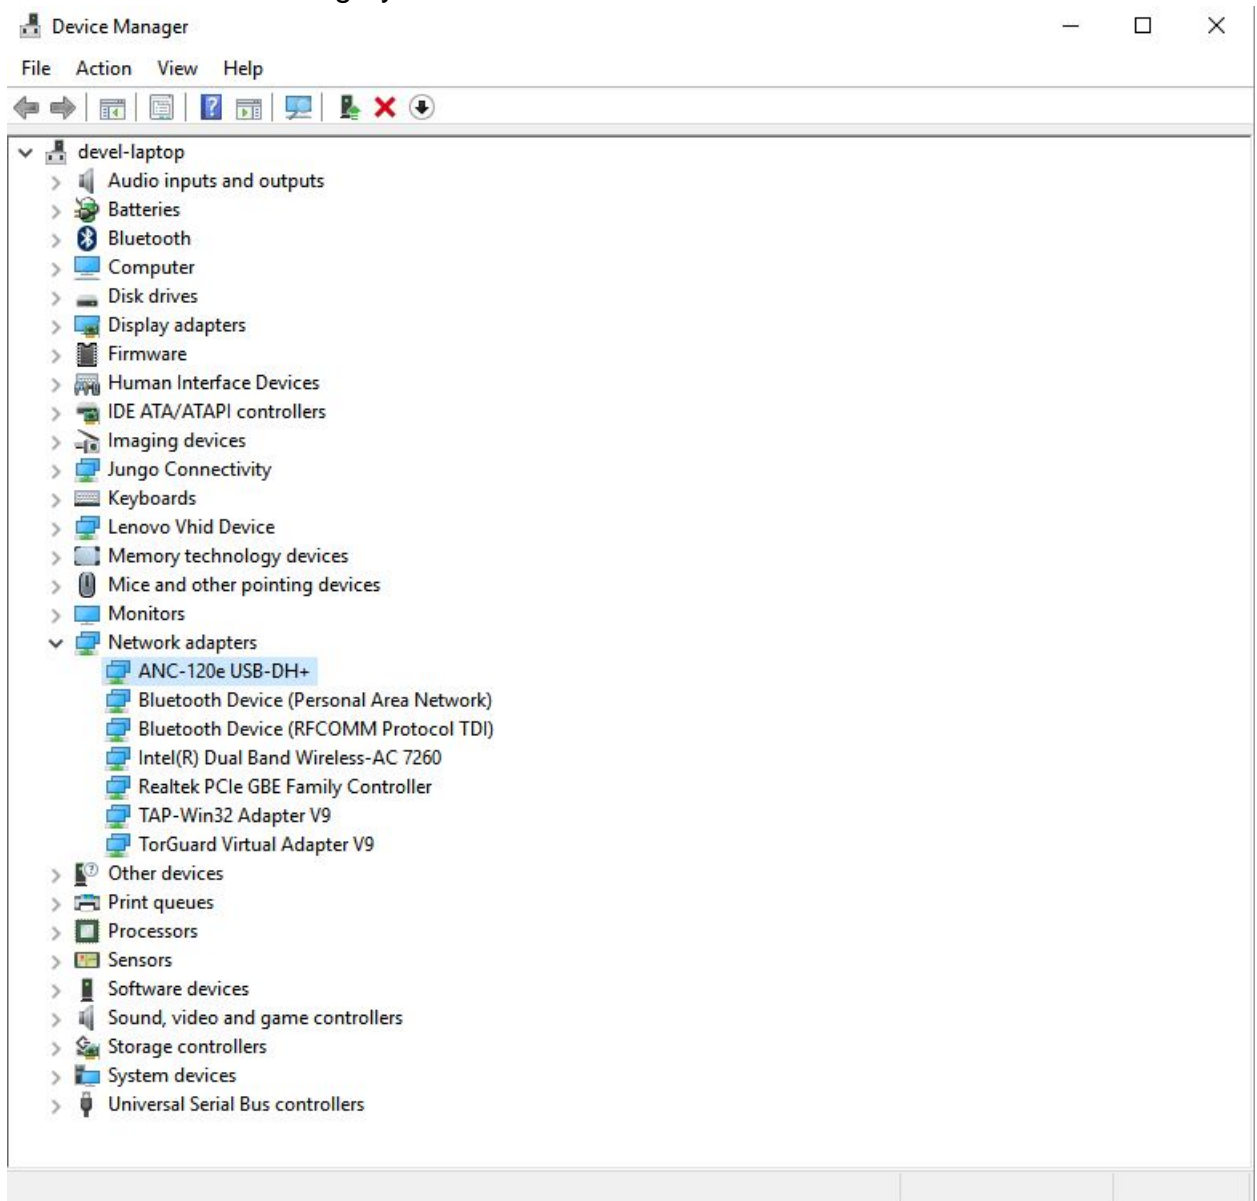

You have successfully installed ANC-120e Windows 8/10 driver